



# VUELO PODIUM SETUP INSTRUCTIONS

**Part # Qty in This Step**


V-POST 1	1
V-POST 2	1
V-POST 3	1
V-POST 4	1
V-POST 5	2
V-Beam 1	1
V-Beam 2	2
V-Beam 3	1
V-Beam 4	2

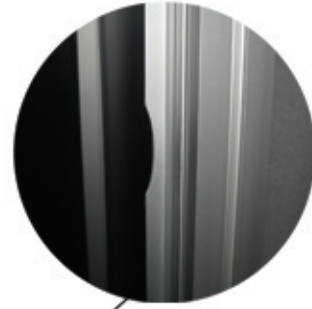

Door Stop Notch on Top

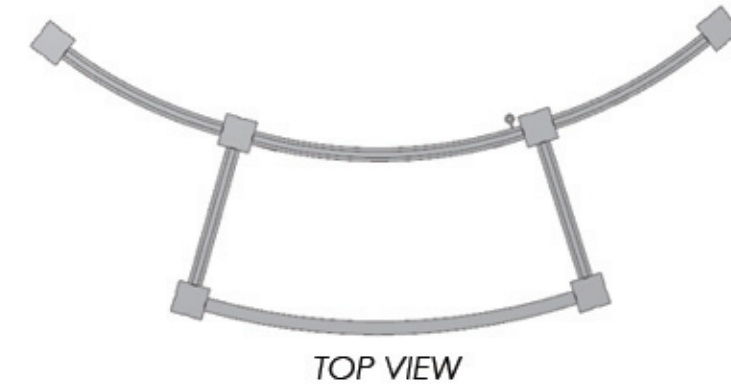

TOP VIEW

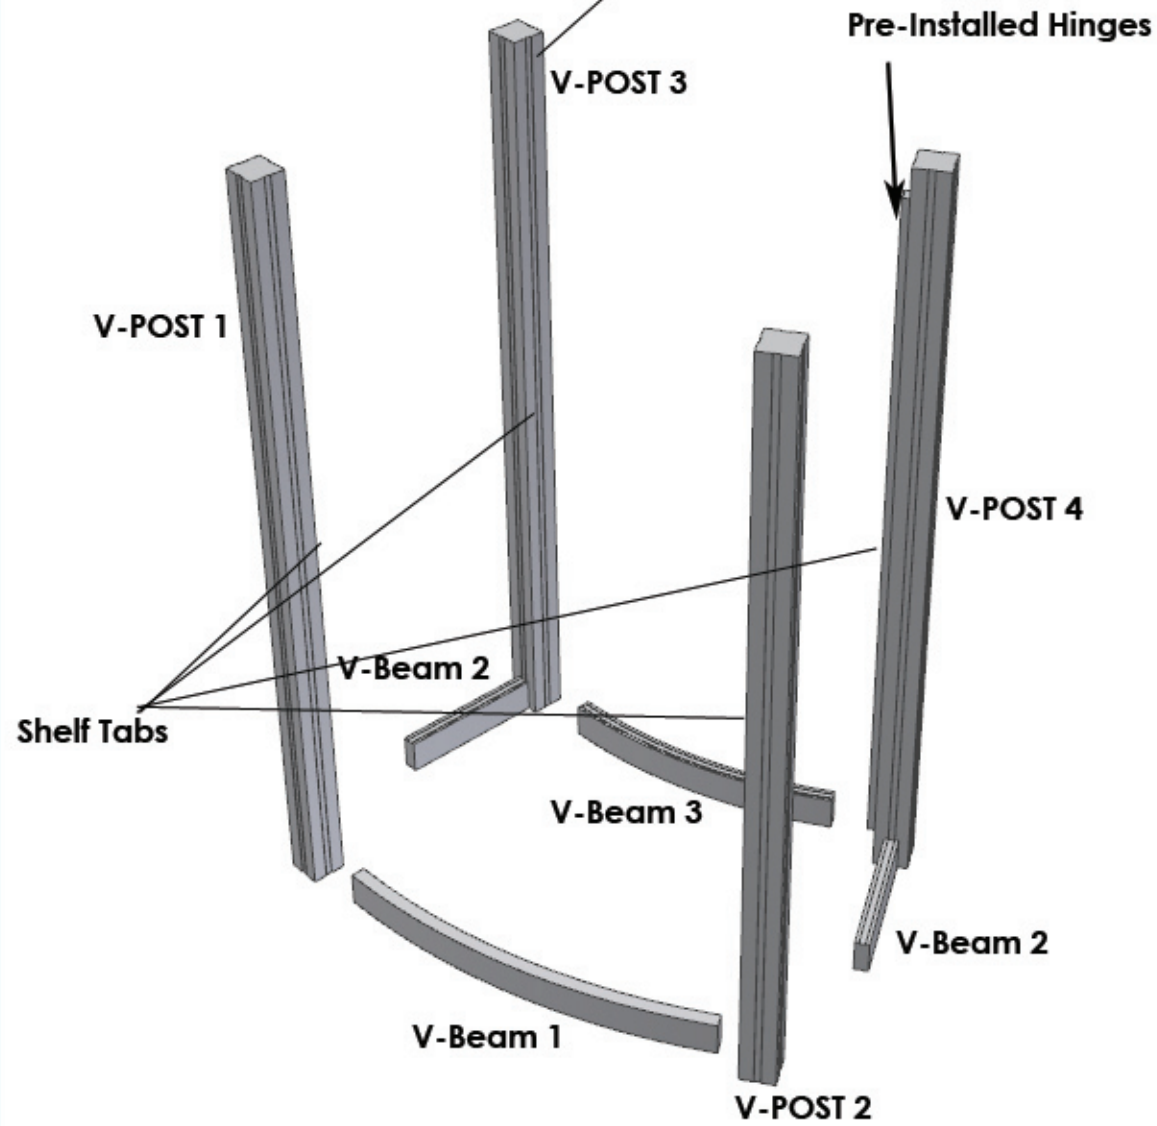


**Step**

- 1 - Place and Secure each Beam As Shown
- 2 - **Post 1/2/3/4** have pre-Installed Shelf tabs. Face all toward the Inside the Cabinet

**NOTE: FACE ALL LOCK SCREWS TOWARD THE INSIDE/BACKSIDE OF PODIUM**

**STEP 1**

Part # Qty in This Step

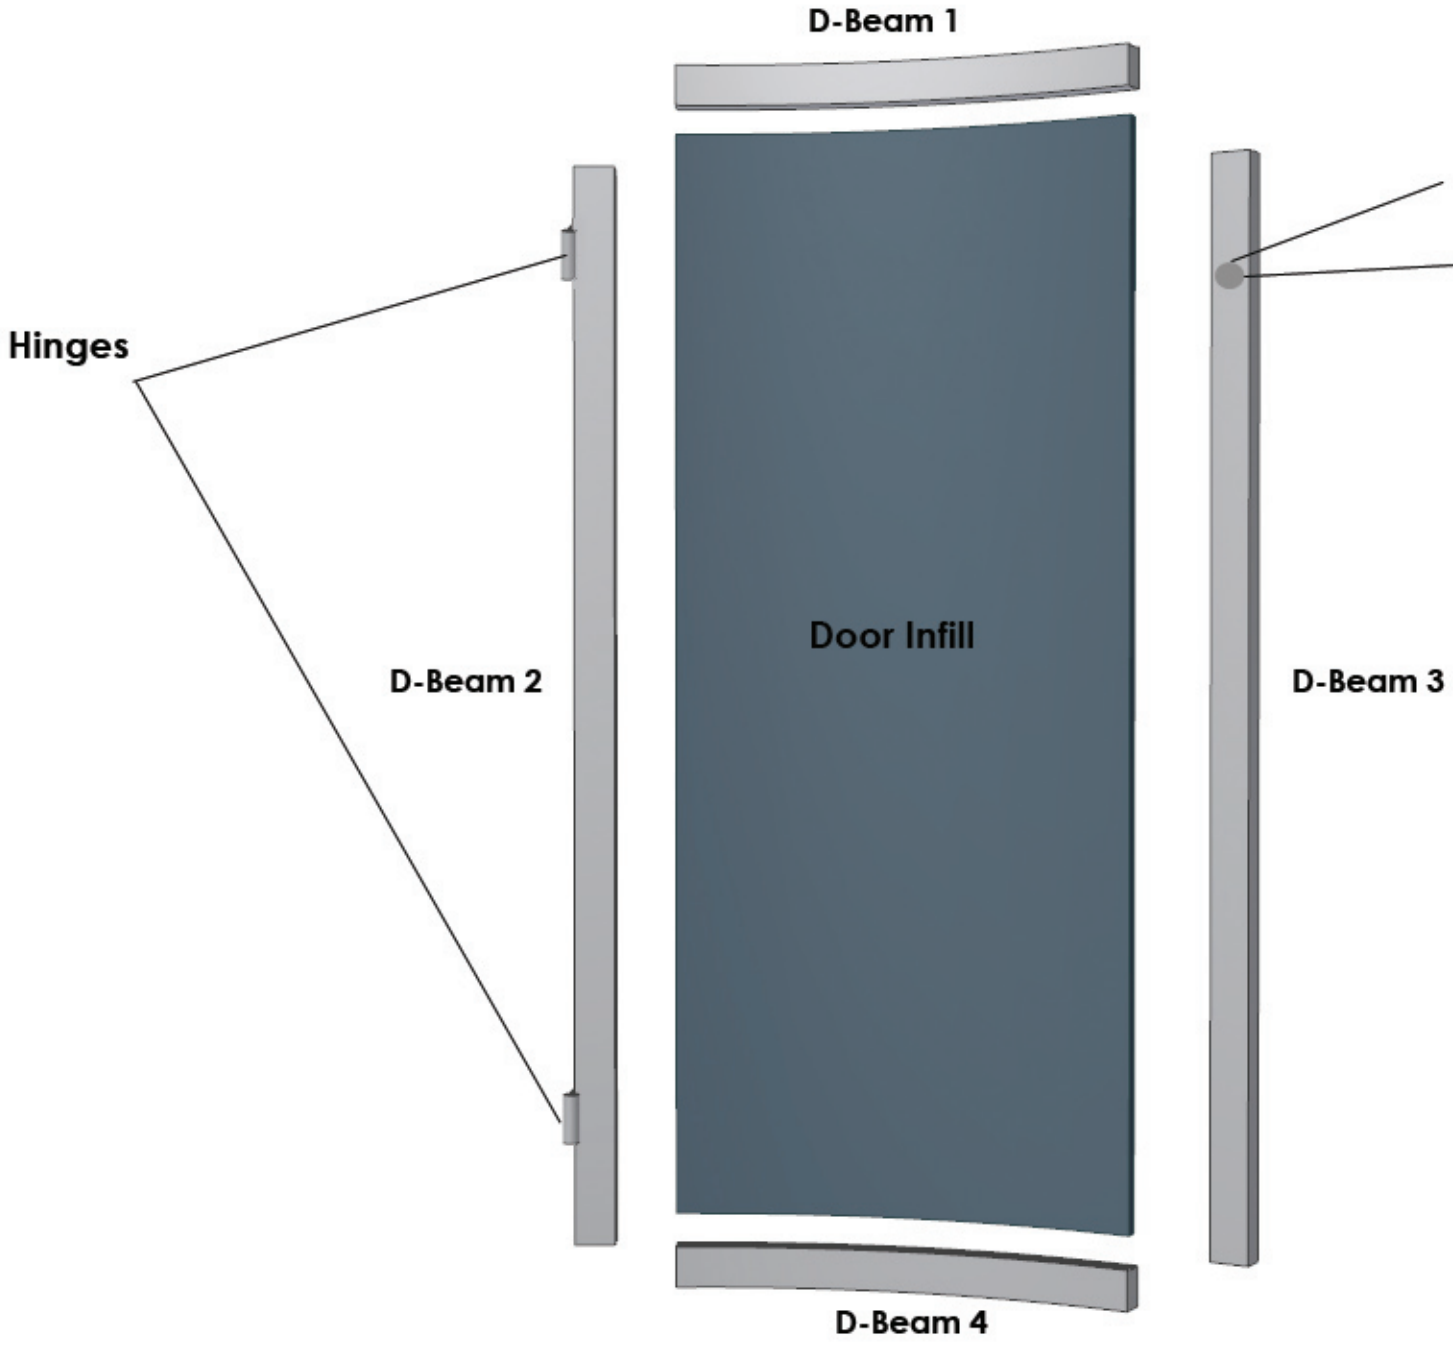

Outside of Cabinet





Inside of Cabinet

Step  
1 - Connect Beams As Shown

**STEP 2**

Part #	Qty in This Step
--------	------------------

V-Beam 1	1
V-Beam 2	2
V-Beam 3	1
V-Beam 4	2

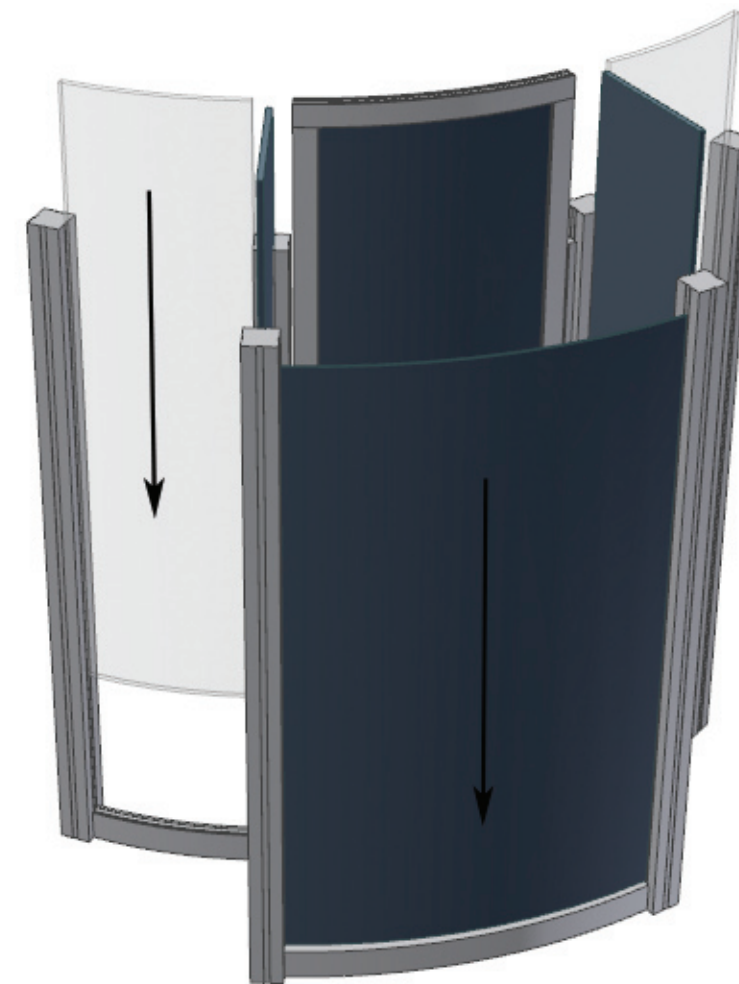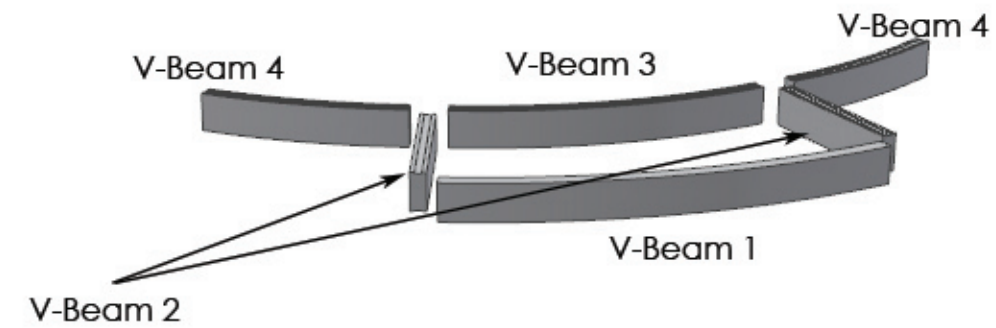



### Steps

- 1 - Place Shelf as shown
- 2 - Slide Each Infill into Place and Secure Beams As Shown


**NOTE: FACE ALL LOCK SCREWS TOWARD THE INSIDE/BACKSIDE OF PODIUM**

Part # Qty in This Step

Counter Top 1

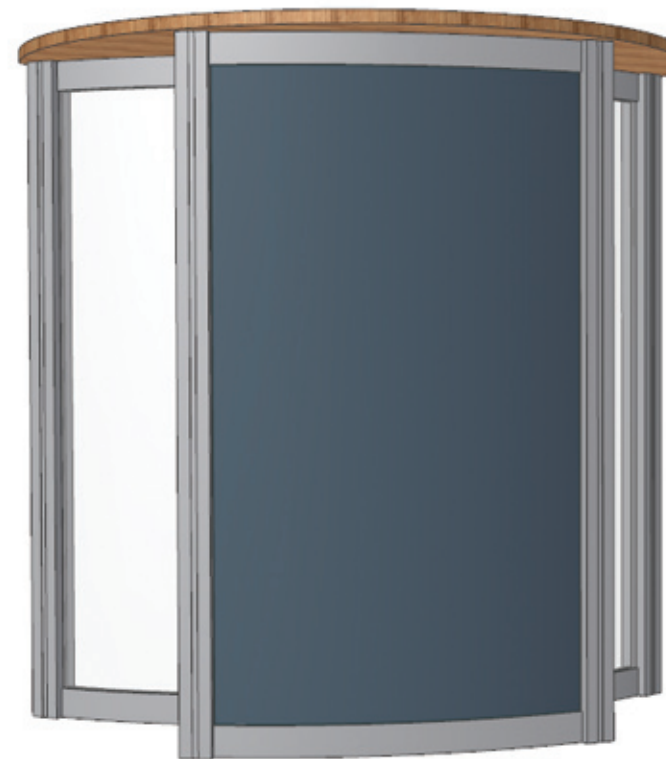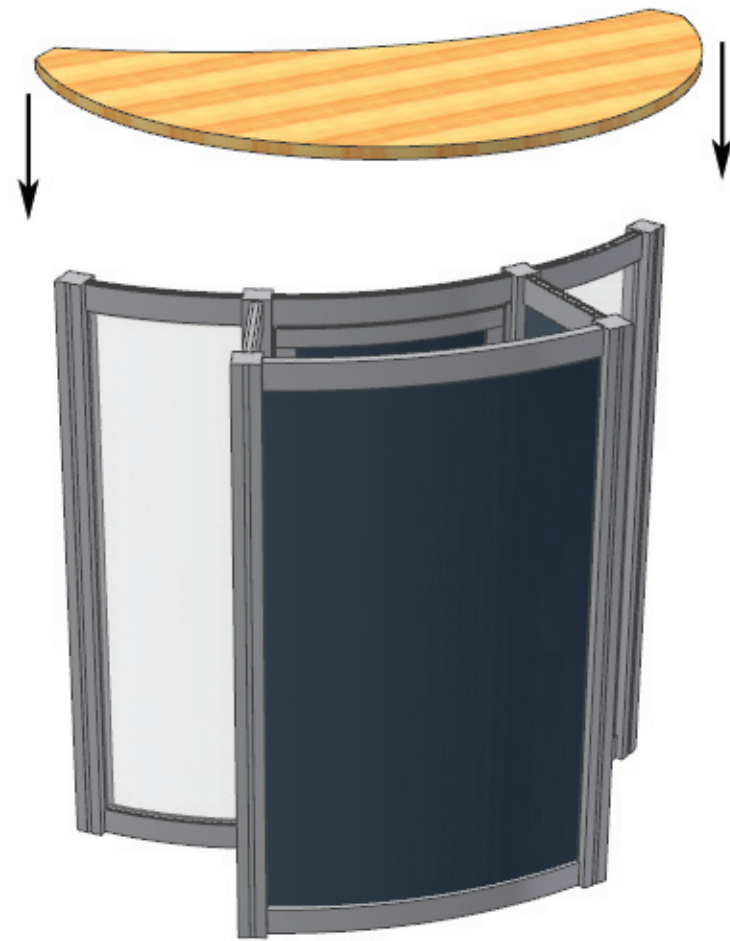

FINAL FRONT VIEW

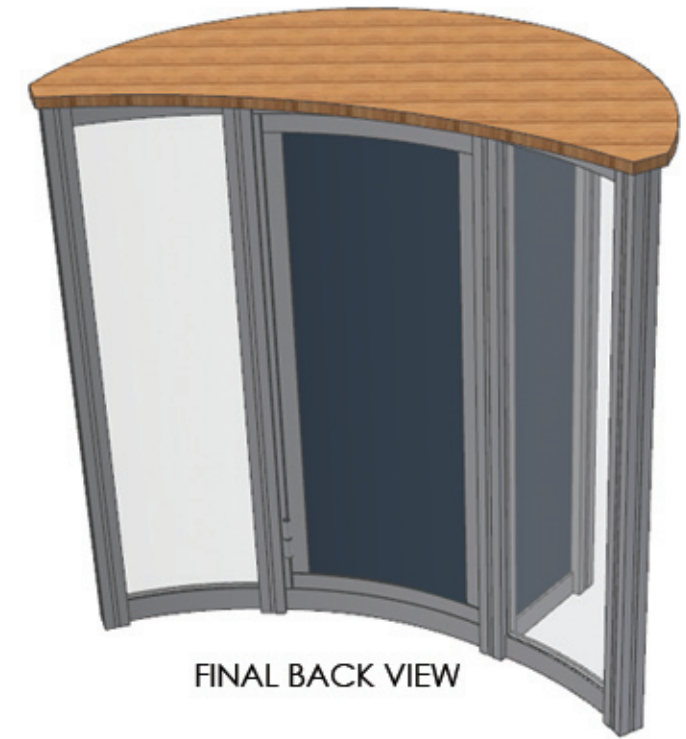

FINAL BACK VIEW

Step

1- Place the Counter Top As Shown